

Rapid surfactant quantitation



Surfactants are sticky business!
Get unstuck with the Atlas™

SIMPLIFIED WORKFLOW

- 1 SCAN BACKGROUND (WATER OR MATRIX)
- 2 SCAN SAMPLE (WITH SURFACTANT)
- ✓ GET RESULTS



Highly accurate data over a wide dynamic range

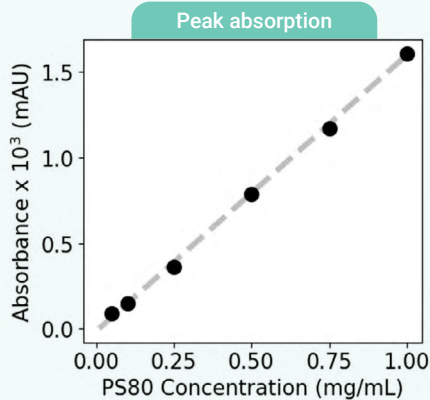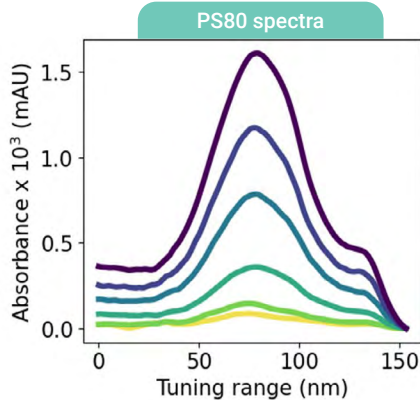

Results in < 1 minute

Polysorbate 80 in Water Target Concentration (mg/mL)	Atlas Average Concentration n=3 (mg/mL)	Std Dev	% Recovery
0.05	0.050	0.011	99.8
0.10	0.099	0.003	99.5
0.25	0.248	0.010	99.1
0.50	0.488	0.017	97.6
0.75	0.746	0.012	99.5
1.00	1.051	0.007	105.0



Surfactant
RESULTS in
any **MATRIX**



Let's talk about
polysorbate
analysis:
info@nirrin.tech